



User's Guide

MODELS :

D46**B, D55**B

D46**P, D55**P

D46**R, D55**R



***DIGITAL
SIGNAGE***

DIGITAL SIGNAGE

Contents

Major features	2
Safety Information	2
Be sure to understand	8
Check the product list	9
Proper location for product installation	10
Portrait Mode	11
Storage Method For Panel Protection	11
Installing a Bracket	12
Title and function of each part	13
Support timing for HDMI/DVI	16
Support timing for Analog RGB	17
Support timing for Component & AV	17
Adjusting OSD and explanation of its function	18
Diagnosis	38
Specifications	40

* REMOTE CONTROL / RS232C COMMAND SPEC

DIGITAL SIGNAGE

Major features

This product has been designed to enable the user ease of use, and display information effectively and conveniently.

Safety Information

DIGITAL SIGNAGE

- Do not touch the power cord with wet hands, it may cause electric shock.
- Overloaded AC outlets and extension cables are as dangerous as the power cord being damaged, call service engineer for replacement as it may cause electric shock or fire.
- Do not use multiple devices in a single power outlet, it may cause overheating or fire.
- Do not use or place sharp objects near the LCD surface, as this can cause damage to the screen itself.
- When cleaning the LCD screen / Surface, do not use chemical cleaning products as this can seriously damage the special coatings on the screen. Only use water to dampen a soft cloth and lightly clear the screen.
- Over time dust deposits can build up inside the product, this can cause the product to overheat thus causing premature malfunction or fire. Please do not attempt to clean the inside of the product yourself, please contact the local service agent.
- Do not use alcohol or strong chemical solvent such as methyl, ethyl or a Isopropyl.
- In the case of cleaning, be sure to remove the power cord and wipe with a soft dry fabric.
- Keep batteries for the remote control out of children's sight.
- Batteries should be inserted using the correct polarity (+, -).
- Use only new batteries, do not mix old & new.
- Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.
- Place unit on a stable bracket or surface.
- More than 2 people should work together when moving or installing.
- Do not hang on or jump to the product or mounting rack.
- When the product is left unused for a long time, be sure to unplug the power cord.
- In the case of damage or breakage do not attempt to self repair, please contact local service engineer.

DIGITAL SIGNAGE

- In case of Kiosk Model, keep installing the product on the flat location and fixing the wheels not to move itself or fall down.
- On Kiosk Model, make sure to turn off the power before connecting cables.
- This manual contains general instructions for the display products only so refer to the provided CD-ROM manual and the driver installation manual for the driver installation instructions for touch screen and/or touch screen itself.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Shall be connected to a MAINS socket outlet with a protective earthing connection.
- The disconnect device shall remain readily operable.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Précautions d'emploi

Ce produit est conçu et formulé, en vue d'assurer la sécurité de l'utilisateur.

L'utilisateur de ce produit peut prévenir les chocs électriques ou autres dangers, en évitant les situations suivantes:

- Ne mettez pas de choses mouillées près du produit et du cordon d'alimentation.
- Ne bloquez pas l'ouverture d'aération, ne le touchez pas avec des objets métalliques ou inflammables.
- Placez l'équipement hors d'une source de projections de graisse, de fumée, de poussière, de température élevée ou d'humidité importante
- Vérifiez que le cordon d'alimentation et les autres cordons sont branchés correctement.
- Branchez le cordon d'alimentation correctement à fond dans la prise, pour qu'il ne bouge pas. Sinon, cela pourrait occasionner un incendie d'origine électrique.
- Ne touchez pas le cordon d'alimentation avec des mains humides. Vous risqueriez une électrocution.
- Une multiprise surchargée ou une prise d'alimentation mal enfichée sont dangereuses ainsi qu'un cordon d'alimentation détérioré ou coupé.
- Dans un de ces cas faites intervenir un technicien qualifié afin de remettre l'installation en conformité afin d'éviter les risques d'accident et d'incendie.
- Ne connectez pas plusieurs appareils sur une même prise secteur. Cela pourrait occasionner un incendie en raison d'une surchauffe.
- N'utilisez pas d'outils ou d'objets pointus (comme des épingles ou des crayons) près de l'équipement. Cela pourrait rayer la surface du LCD.
- La surface du LCD est très fragile, et sensible au produit chimique. N'employez pas le solvant chimique, comme le benzène par exemple, sur l'équipement, sinon cela pourrait endommager gravement la surface du LCD.
- Nettoyez la légèrement avec un tissu doux.
- Renseignez-vous une fois par an au Centre de Service ou à l'Assistance à la clientèle, sur le nettoyage de l'intérieur du produit. S'il y a des poussières accumulés à l'intérieur du produit, en le laissant assez longtemps sans nettoyage, cela peut causer un incendie, ou une panne.
- N'employez pas l'alcool (méthyllique, éthylique, ou isopropylique) et de solvant chimique fort.
- Débranchez toujours le cordon d'alimentation avant de nettoyer l'équipement. Nettoyez avec un tissu sec et doux.
- Assurez-vous de conserver les piles de la télécommande hors de portée des enfants.

DIGITAL SIGNAGE

- Respectez les polarités (+/-) lors du remplacement des piles.
- Vérifiez les dimensions exactes des piles lors du changement des piles. Ne mélangez pas des piles neuves et des piles usagées.
- Installez le produit sur un socle stable afin d'éviter qu'il ne bouge ou chute.
- Plus de deux personnes sont requises pour déplacer ou installer cet appareil.
- Veillez à ce que les enfants ne montent pas ou ne s'accrochent pas à l'appareil ou au socle.
- ébranchez le cordon d'alimentation lors des périodes d'inutilisation prolongées de l'appareil.
- Si le produit est tombé ou si le boîtier est endommagé, éteignez le et débranchez le cordon d'alimentation, et confiez la réparation au Centre de Services.
- Pour le Totem, installer le produit verticalement et bloquer les roues pour ne pas qu'il se déplace.
- Pour le Totem, vérifiez de couper l'alimentation avant de brancher les câbles.
- Ce manuel contient des instructions générales relatives aux produits d'affichage uniquement. Par conséquent reportez- vous au manuel sur CD-ROM et au manuel d'installation du pilote pour les instructions relatives à l'installation du pilote de l'écran tactile, et /ou de l'écran tactile lui-même.
- Protéger l'appareil contre les projections d'eau ou les éclaboussures et ne placer aucun objet contenant du liquide, tel qu'un vase au dessus de l'appareil.
- Il doit être raccordé à une prise SECTEUR dotée d'une protection par mise à la terre.
- Lorsqu'il est débranché, la prise de cet appareil doit rester facilement accessible.
- La sortie prise doit être installée à proximité de l'équipement et doit rester accessible en permanence.
- Utilisez uniquement un chariot, un support, un trépied, une équerre ou une table spécifié par le fabricant ou vendu avec l'appareil.
Si un chariot est utilisé, déplacez avec précaution l'ensemble chariot/appareil afin d'éviter toute chute de l'appareil pouvant entraîner des blessures aux personnes situées à proximité.

DIGITAL SIGNAGE



WARNING

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USE BATTERIES ACCORDING TO THE INSTRUCTIONS

ATTENTION

IL Y A RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉE PAR UNE BATTERIE DE TYPE INCORRECT.
METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS

pour le MATÉRIEL RACCORDÉ PAR PRISE DE COURANT, le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.



WARNING

Hazardous moving parts
Keep away from moving fan blades



AVERTISSEMENT

Pièces mobiles dangereuses
Se tenir éloigné des pales de ventilateurs mobiles

DIGITAL SIGNAGE

Be sure to understand

Image quality of the product



CAUSE

Due to the nature of LCD's property, Afterimage can occur. Afterimage appears when identical frames / images are displayed continuously. If displayed for prolonged periods of time this can become permanent.



PREVENTION

When you display a freeze frame for a long time, lower the brightness and contrast (Brightness, 70/ Contrast, 80). Also it can be decreased by using Pixelshift function.



COUNTERMEASURES

Temporary afterimage can be alleviated by displaying white or moving frame about 10 hours. (But, permanent afterimage cannot be disappeared according to the property of LCD) This method is used to remove temporary afterimage that may occur after displaying a still frame for a certain time.

It can take several minutes or hours to remove afterimage according to the severity. In the case that you cannot avoid displaying identical still image continuously, you can prevent it by displaying moving image for 2 or 3 minutes in every hour. As the brightness of still image and time of display are the cause of afterimage, you are recommended to lower the brightness in that case.



Above problem shall not be covered by warranty.

DIGITAL SIGNAGE

Check the product list

Please check the following components provided with the product after you open the box.



 
Remote control



Audio cable (Option)



DP cable (Option)




Power Cord




HDMI cable



 HDMI to DVI Cable (Option)



CD Manual & Sheet

 

D-SUB Cable



RS232C Cable



please check the following components provided with the product after you open the box and contact the dealer if any missing.

** The contents may vary depending on models and sometimes the contents may be attached on the product.*

DIGITAL SIGNAGE

Proper location for product installation

1. Locate the product at least 30cm away from the electric appliance or heating product.
2. The product must be placed at least 10cm away from the wall and ground.
3. Keep the product out of direct ray of light and locate screen not to be reflected by the sunlight.
4. Make sure the mounting rack firmly tightened before installation.
5. Use an authorized wall mount and contact the local dealer or qualified personnel.



Please take extra care during installation, it is possible to cause damage if the unit is handled badly or knocked.




Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.



Do not install the product in a place with no ventilation (e.g., on a bookshelf or in a closet) or on a carpet or cushion. If there is no other option but to mount the product on the wall, make sure that sufficient ventilation is provided before installation.


- Failure to do so may result in a fire due to the increase in the internal temperature.

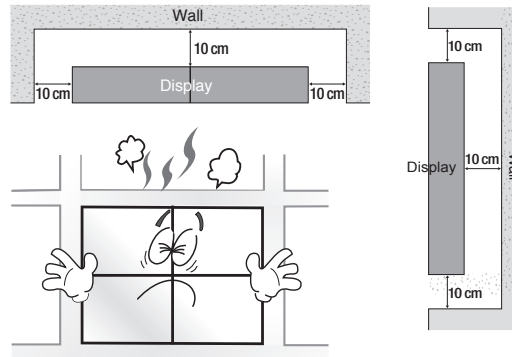


DIGITAL SIGNAGE

Portrait Mode


- Only on some models.
- When installing in portrait mode, rotate the monitor clockwise

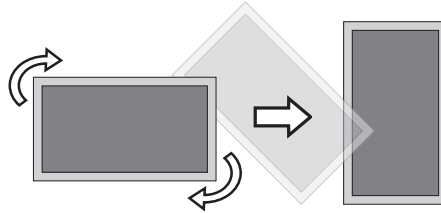


Storage Method For Panel Protection

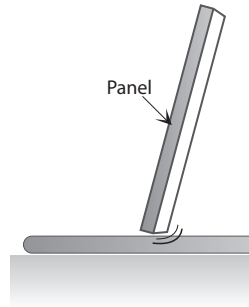

 If the product needs to be set upright, hold both sides of the product, and tilt backward carefully for. Do not let the panel not to touch the floor.



When laying down the product, lay a cushion on a flat floor. Put the product on it with the panel of the product facing down.

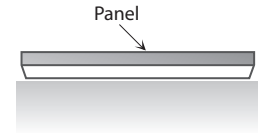


If there is not a cushion available, ensure the floor is clean and then lay the product down carefully with the panel facing either upward or downward. At this time, be careful for objects not to fall on the panel.

DIGITAL SIGNAGE

Installing a Bracket


- The contents may vary depending on models

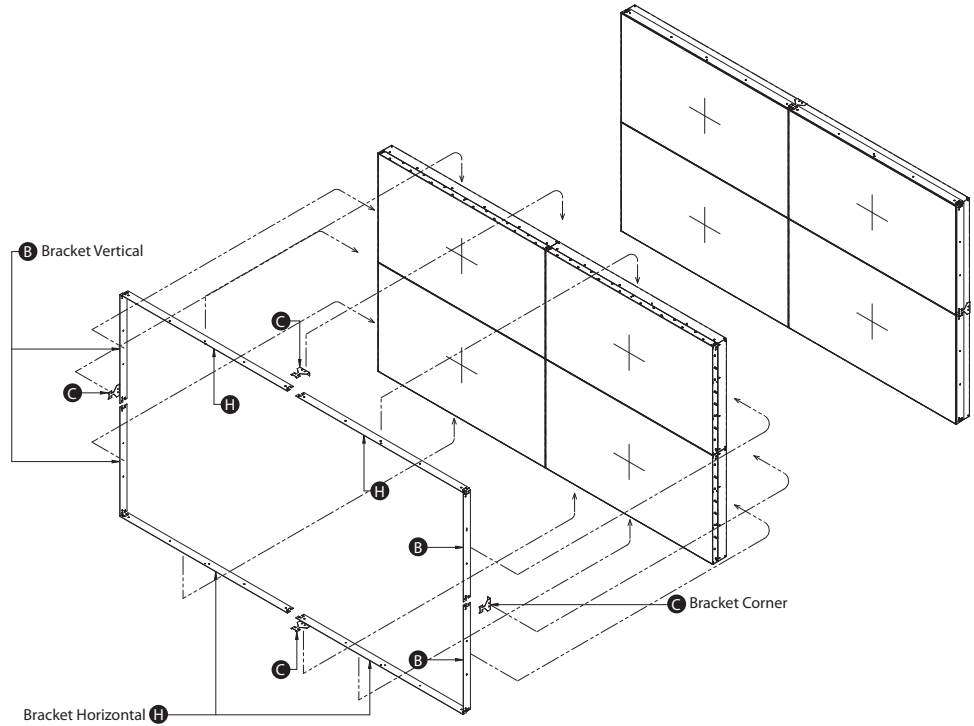

DIGITAL SIGNAGE

Title and function of each part


- ❶ Power button ; to turn the power on or off.
- ❷ Input selection button : to select other connected device.
- ❸ Menu button : to display menu or exit from the menu.
- ❹ Select button.
- ❺ To move down in OSD menu.
- ❻ To move up in OSD menu.
- ❼ To move left and control the volume down in OSD menu.
- ❽ To move right and control the volume up OSD menu.

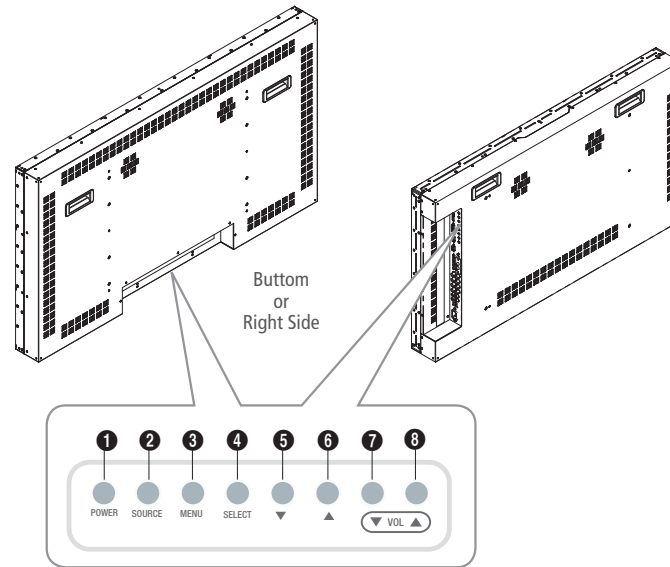

✓ The locations of OSD board and remote control receiving sensor may vary depending on models.

DIGITAL SIGNAGE

Terminal panel

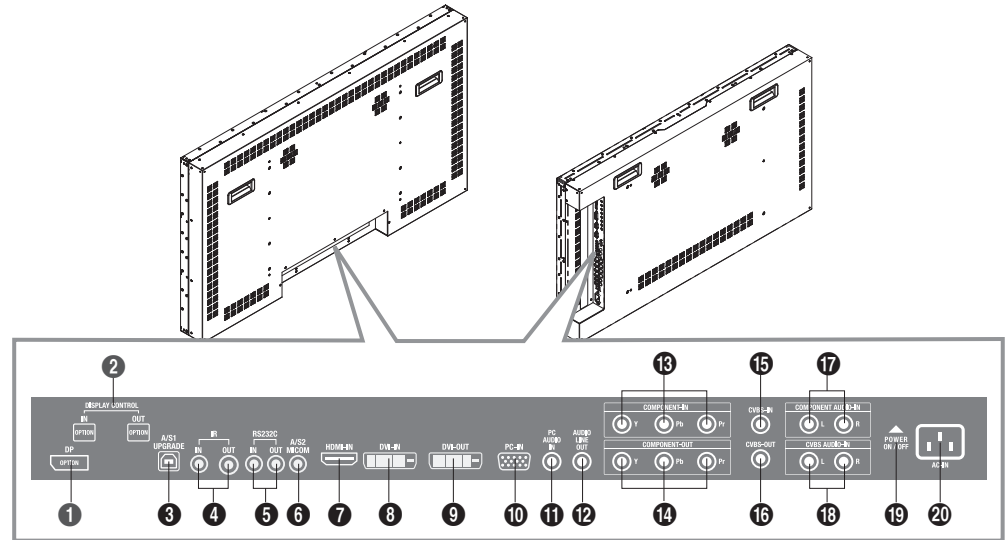

1 DisplayPort (Option)

At the end of the model name "P" is the DisplayPort default.

2 Display Control-IN/OUT (Option)

3 6 UPGRADE Port :

This port is used for upgrade service and not for general users.

4 IR-IN/OUT

5 RS232C-IN/OUT

7 HDMI IN

8 DVI IN

9 DVI OUT

10 PC D-SUB IN

11 PC AUDIO-IN

12 AUDIO LINE-OUT

13 COMPONENT-IN

14 COMPONENT-OUT

15 CVBS-IN

16 CVBS-OUT

17 COMPONENT AUDIO-IN


18 CVBS AUDIO-IN

19 AC POWER SWITCH

20 AC-IN

DIGITAL SIGNAGE

Remote control

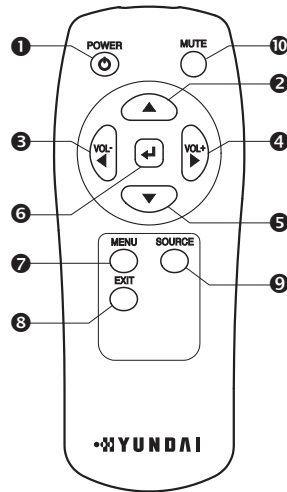

- ❶ To turn the power on or off.
- ❷ Move up in OSD menu.
- ❸ To move left or control the volume down in OSD menu.
- ❹ To move right or control the volume up in OSD menu.
- ❺ To move down in OSD menu.
- ❻ [ENTER] Select in OSD menu.
- ❼ Display the OSD menu.
- ❽ Close the OSD menu.
- ❾ Display the menu of signal source and choose it.
- ❿ Temporary sound switch off.

[TIP] If it doesn't need to control display by a remote-controller, press button of remote-controller in order following.

MENU → SOURCE → EXIT → ▼ → ENTER (↵)

* Press button once again in order above so that original condition is returned.

DIGITAL SIGNAGE

Support timing for
DVI

HDMI

NO	Resolution	Horizontal frequency (KHz)	Vertical frequency (Hz)
1	480p	640 x 480p	60
2	576p	720 x 576p	50
3	720p	1280 x 720p	50 / 60
4	1080i	1920 x 1080i	50 / 60
5	640 x 480	31.47	59.94
6	800 x 600	37.88	60.32
7	1024 x 768	48.36	60
8	1360 x 768	47.70	60
9	1280 x 1024	63.98	60
10	1920 x 1080	67.50	60
11	1080p	1920 x 1080p	60

DIGITAL SIGNAGE

Support timing for
RGB

Analo

NO	Resolution	Horizontal frequency (KHz)	Vertical frequency (Hz)
1	640 x 480	31.47	59.94
2	800 x 600	37.88	60.32
3	1024 x 768	48.36	60.00
4	1360 x 768	47.71	60.00
5	1280 x 1024	63.98	60.00
6	1920 x 1080	67.50	60.00

Support timing for
Component & AV


NO	Resolution	Horizontal frequency (KHz)	Vertical frequency (Hz)
1	480i	640 x 480i	59.94 / 60
2	480p	640 x 480p	59.94 / 60
		720 x 480p	59.94 / 60
3	576p	720 x 576p	50
4	720p	1280 x 720p	59.94 / 60 / 50
5	1080i	1920 x 1080i	59.94 / 60 / 50
*6	1080p	1920 x 1080p	60 / 50

DIGITAL SIGNAGE

Adjusting OSD and explanation of its function

How to Select the Picture Mode

Users can automatically adjust the picture mode according to the input mode.

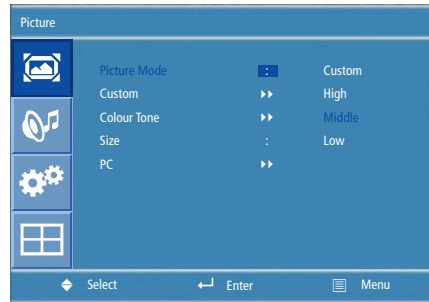

1. Press Menu button.
Menu items appear on the screen.
2. Press $\leftarrow$ button to select "Picture" Icon. "Picture mode" is highlighted.
3. Press $\rightarrow$ or $\leftarrow$ buttons to select "Picture mode".
4. The menu changes in the following order.
Custom -> High -> Middle -> Low
5. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

✓ Menu of PC doesn't appear on OSD when user uses HDMI and DVI signal.

DIGITAL SIGNAGE

How to Set the Desired Picture

Users can manually adjust their desired picture




1. Press Menu button.
Menu items appear on the screen.
2. Press $\leftarrow$ button to select "Picture" Icon.
"Picture mode" is highlighted.
3. Press $\blacktriangle$ / $\blacktriangledown$ buttons to move to "Custom" and press $\blacktriangleright$ or $\leftarrow$ buttons to select "Custom".
4. Select required option by pressing the $\blacktriangle$ / $\blacktriangledown$ or $\leftarrow$ button, then Press $\blacktriangleleft$ / $\blacktriangleright$ button to adjust.
5. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

- Brightness : Adjust the brightness of the entire picture.
- Contrast : Adjust the brightness and darkness of the object and backgrounds.

DIGITAL SIGNAGE

How to Select a Colour Tone

Users can adjust Color as users want.

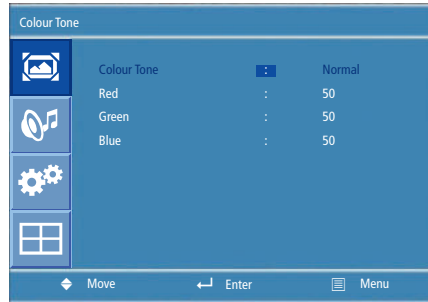

1. Press Menu button.
Menu items appear on the screen.
2. Press  button to select "Picture" Icon.
"Picture Mode" is highlighted.
3. Press  /  buttons to move to "Colour Tone"
4. Press  or  buttons to select "Colour Tone" .
5. Press  /  buttons, then the menu changes in the following order.
Custom -> Cool2 -> Cool1 -> Normal -> Warm1 -> Warm2



6. Press EXIT button to escape OSD menu or press MENU button to return to the previous menu.

- Custom : When the user wants to set the degree of RGB directly.
- Cool : For cool colors with bluish tone.
- Normal : For a general Colour Tone.
- Warm : For warm colors with reddish tone.

DIGITAL SIGNAGE

How to Set the Display Size

Users can adjust the display scale as they want

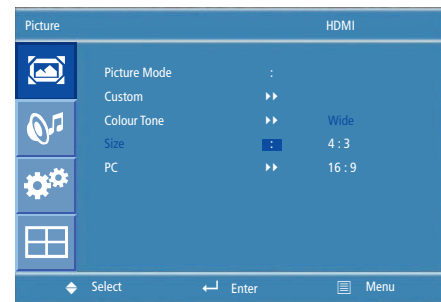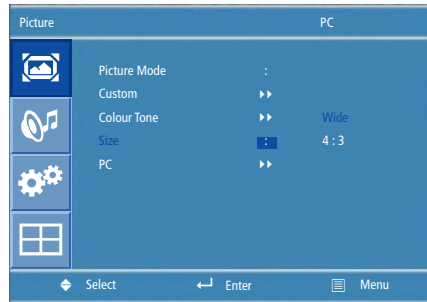


1. Press Menu button. Menu items appear on the screen.
2. Press button to select "Picture" Icon. "Picture Mode" is highlighted.
3. Press / buttons to move to "Size".
4. Press / or buttons and press / then the mode change in the following order.
 - Wide -> 4 : 3
- * The display size aspect mode change in the HDMI, DVI mode in the following order.
 - Wide -> 4 : 3 -> 16 : 9
5. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

✓ Menu of PC doesn't appear on OSD when user uses HDMI and DVI signal.

DIGITAL SIGNAGE

How to set image adjustment in PC mode
(Supported only in PC mode)

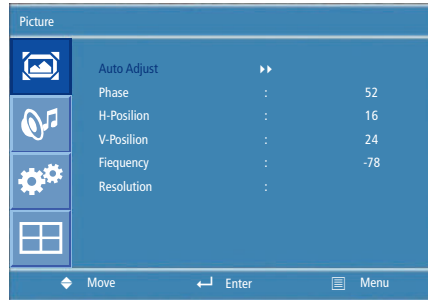

1. Press Menu button.
Menu items appear on the screen.
2. Press $\leftarrow$ button to select "Picture" Icon.
"Picture Mode" is highlighted.
3. Press $\blacktriangle$ / $\blacktriangledown$ buttons to move to PC and press
 $\blacktriangleright$ or $\leftarrow$ buttons to select to "PC"
"Auto Adjust" is high lighted.
4. Press $\leftarrow$ button to execute the "Auto Adjust"
5. Select the required option by pressing the $\blacktriangleleft$ / $\blacktriangleright$ or $\leftarrow$ button, then press
 $\blacktriangleleft$ / $\blacktriangleright$ button to adjust


6. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

- Auto Adjust : Horizontal/vertical positions are automatically adjusted.
- Phase : To eliminate the shake of the picture.
- H-Position : To adjust the horizontal position of the picture.
- V-Position : To adjust the vertical position of the picture.
- Frequency : To eliminate the shake of picture.
- Resolution : Selecting resolution is allowed to only set to 1024x768, 1280x768, 1360x768, 1366x768. Select corresponsive resolution with specified resolution of image.

DIGITAL SIGNAGE

How to Select the Audio Mode

Users can adjust sound mode automatically as they want.

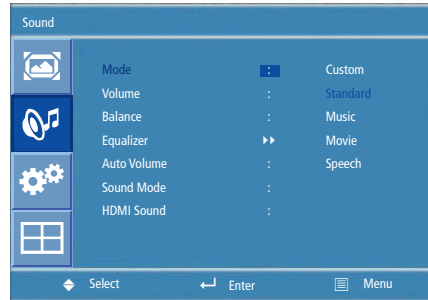



1. Press Menu button. Menu items appear on the screen.
2. Press ▲ / ▼ buttons to move to "Sound" Icon.
3. Press ↵ button to select "Sound" Icon. "Mode" is highlighted.
4. Press ► or ↵ buttons, to select to Sound mode.
then the menu changes in the following order. Custom->Standard -> Music -> Movie -> Speech
5. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

- Custom : When the user wants to set the values directly.
- Standard : For the general sound. Most audio contents are appropriate to this mode.
- Music : For enjoying original sound.
- Movie : Grandiose sound.
- Speech : Clear sound.

DIGITAL SIGNAGE

How to Adjust the Desired Audio Mode

Users can adjust sound mode automatically as they want.

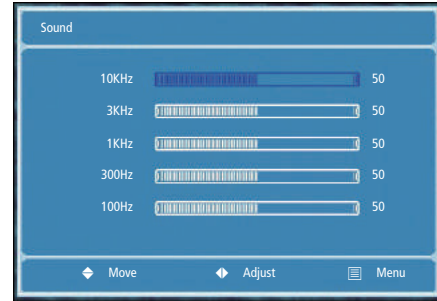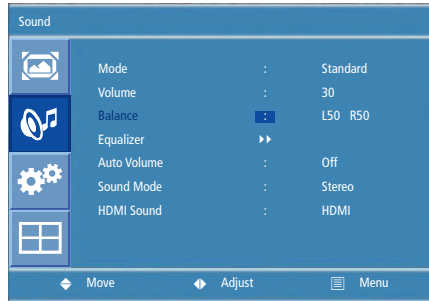


1. Press Menu button. Menu items appear on the screen.
2. Press ▲ / ▼ buttons to move to "Sound" Icon.
3. Press ↵ button to select "Sound" Icon. "Mode" is highlighted.
4. Press ▲ / ▼ buttons to move to "Balance" or "Equalizer" .
5. Press ↵ buttons to select "Balance" or "Equalizer". Balance or Equalizer menu appears.
6. Select required option by pressing the ▲ / ▼ buttons, then Press ◀ / ▶ buttons to adjust.
7. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

- Balance : Adjusts the balance of left and right speakers.
- Equalizer : Adjusts the audio output signal in the desired band.

DIGITAL SIGNAGE

How to Select Auto Volume


This function will automatically give a similar volume size to each channel.

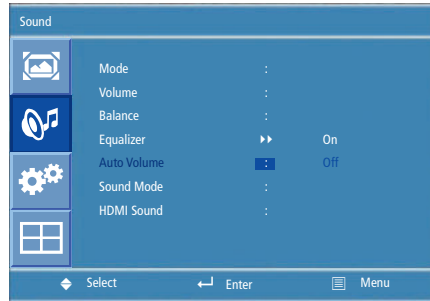

1. Press Menu button.
Menu items appear on the screen.
2. Press ▲ / ▼ buttons to move to "Sound" Icon.
3. Press ↵ button to select "Sound" Icon.
"Mode" is highlighted.
4. Press ▲ / ▼ buttons to move to "Auto Volume".
5. Press ◀ / ▶ or ↵ buttons to select "On/Off".
6. Press ▲ / ▼ or ↵ buttons to set to "On/Off".
7. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu

How to Select Sound Mode

Depending on the particular program being broadcast, you can select stereo or mono.

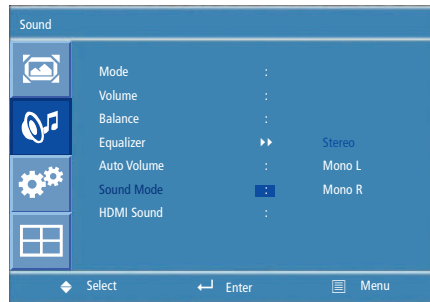


1. Press Menu button.
Menu items appear on the screen.
2. Press ↵ button to select "Sound" Icon.
"Mode" is highlighted.
3. Press ▲ / ▼ buttons to move to "Sound Mode".
4. Press ▶ or ↵ buttons to select to "Sound Mode".
5. Press ▲ / ▼ buttons to select to "Stereo", "Mono L" or "Mono R".
6. Press exit button to escape OSD MENU or press MENU button to return to the previous menu

- Choose "Stereo" for channels that are broadcasting in Stereo.
- Choose "Mono" for channels that are broadcasting in Mono, or if you are having difficulty receiving a Stereo signal.

DIGITAL SIGNAGE

How to Select HDMI Sound

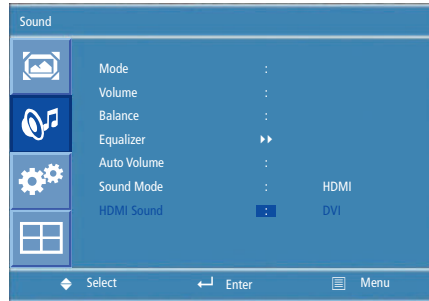

1. Press Menu button.
Menu items appear on the screen.
2. Press  button to select "Sound" Icon.
"Mode" is highlighted.
3. Press  /  buttons to move to "HDMI Sound".
4. Press  or  buttons to select to "HDMI Sound".
5. Press  /  buttons to select to "DVI".
6. Press exit button to escape OSD MENU or press MENU  button to return to the previous menu

✓ *HDMI : Audio signal is included in the HDMI signal.*

✓ *DVI : If audio signal is not included in the HDMI signal, you can listen audio from PC audio port.*

DIGITAL SIGNAGE


How to Reset



1. Press Menu button.
Menu items appear on the screen.
2. Press $\downarrow$ button to select "Setup" Icon.
"Reset" is highlighted.
3. Press $\rightarrow$ or $\downarrow$ buttons to select to "Reset".
4. Press $\downarrow$ buttons to choose to "Reset".
5. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.


When you select "Reset" user setting Value will initialize.

How to Set Clock,Sleep Time, ON/ OFF Time

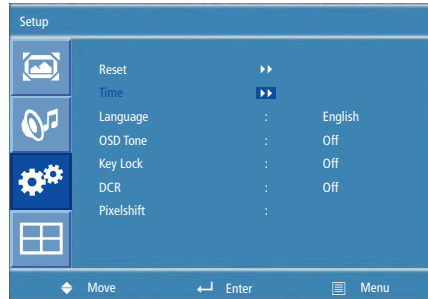


1. Press Menu button.
Menu items appear on the screen.
2. Press $\downarrow$ button to select "Setup" Icon.
"Reset" is highlighted.
3. Press $\uparrow$ / $\downarrow$ buttons to move to "Time".
4. Press $\rightarrow$ or $\downarrow$ buttons to select "Time".
Time menu appears, then "Clock" is highlighted.
5. Press $\leftarrow$ / $\rightarrow$ buttons to move between Hour, Minute and Press $\uparrow$ / $\downarrow$ buttons to set Hour, Minute.

DIGITAL SIGNAGE

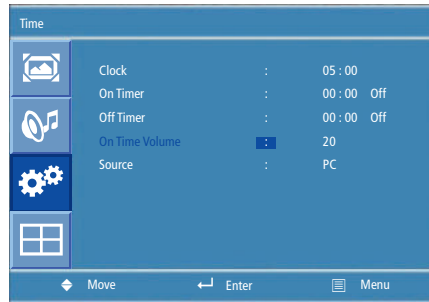

<go to step 11 if you need to set the "Source">

11. Press ▲ / ▼ buttons to move to "Source"
12. Press ► or ◀ buttons to select to "Source"
13. Press ▲ / ▼ buttons to set to Source

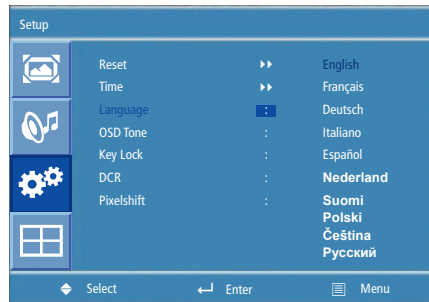

<Go to step 6 if you need to set the "On or Off Timer">


6. Press ▲ / ▼ buttons to move to "On or Off Timer".
 7. Press ► or ◀ buttons to select "On or Off Timer".
 8. Press ◀ / ► buttons to move between Hour, Minute and on/off and Press ▲ / ▼ buttons to set Hour, Minute and on/off
- <go to step 9 if you need to set the "On Time Volume">
9. Press ▲ / ▼ buttons to move to "On Time Volume".
 10. Press ◀ / ► buttons to adjust Volume.

Choosing the Your Languages

1. Press Menu button.
Menu items appear on the screen.
2. Press ◀ button to select "Setup" Icon.
"Reset" is highlighted.
3. Press ▲ / ▼ button to move to "Language" and press ► or ◀ button to select to "Language".
4. Press ▲ / ▼ buttons to set to language.
5. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

DIGITAL SIGNAGE


How to set OSD Transparency

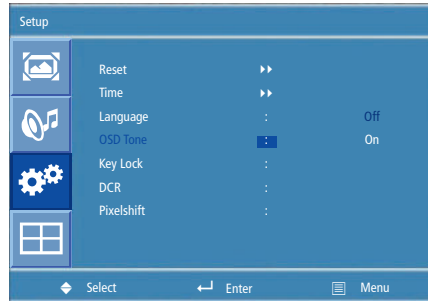

1. Press Menu button.
Menu items appear on the screen.
2. Press $\leftarrow$ button to select "Setup" Icon.
"Reset" is highlighted.
3. Press $\blacktriangle$ / $\blacktriangledown$ buttons to move to "OSD Tone"
4. Press $\blacktriangleright$ or $\leftarrow$ buttons to select to "OSD Tone".
5. Press $\blacktriangle$ / $\blacktriangledown$ or $\leftarrow$ buttons to set to "On/Off".

How to Set Key-Lock

User can lock the control buttons on the front bottom of the Monitor.

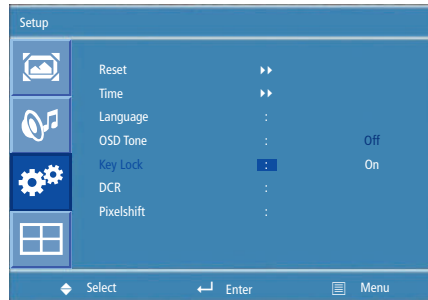


1. Press Menu button.
Menu items appear on the screen.
2. Press $\blacktriangle$ / $\blacktriangledown$ button to move to "Setup" Icon.
3. Press $\leftarrow$ button to select "Setup" Icon.
"Reset" is highlighted
4. Press $\blacktriangle$ / $\blacktriangledown$ buttons to move to "Key Lock".
5. Press $\blacktriangleright$ or $\leftarrow$ buttons to select to "Key Lock".
6. Press $\blacktriangle$ / $\blacktriangledown$ or $\leftarrow$ buttons to set to "On/Off".
7. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

✓ If you turn off the AC power, key-lock function is unlock.

DIGITAL SIGNAGE

How to select DCR

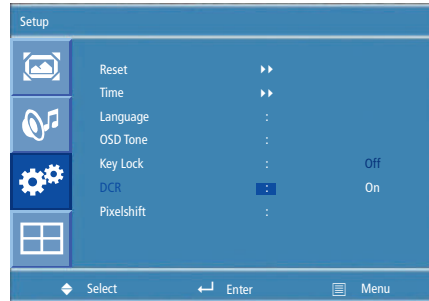


1. Press Menu button.
Menu items appear on the screen.
2. Press ▲ / ▼ button to move to "Setup" Icon.
3. Press ↵ button to select "Setup" Icon.
"Reset" is highlighted.
4. Press ▲ / ▼ buttons to move to "DCR".
5. Press ► or ↵ buttons to select to "DCR".
6. Press ▲ / ▼ or ↵ buttons to set to "On/Off".
7. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

DIGITAL SIGNAGE

How to select Pixelshift

This function prevents image burn-in problem on LCD screen.


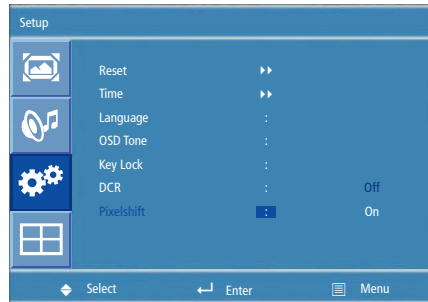


1. Press Menu button.
Menu items appear on the screen.
2. Press ▲ / ▼ button to move to "Setup" Icon.
3. Press ↵ button to select "Setup" Icon.
"Reset" is highlighted.
4. Press ▲ / ▼ buttons to move to "Pixelshift".
5. Press ► or ↵ buttons to select to "Pixelshift".
6. Press ▲ / ▼ or ↵ buttons to set to "On/Off".
7. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

- ✓ When Pixelshift option is on, the image moves on the display periodically. It might be seen like the image pops but not the symptoms of display error.
- ✓ Pixelshift function is to decrease image sticking.

DIGITAL SIGNAGE

How to Set the Multi Function

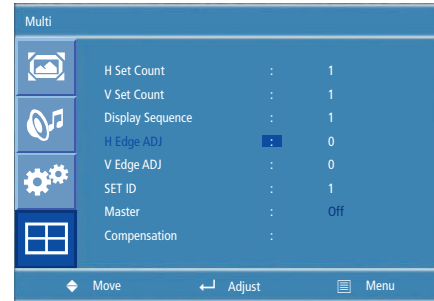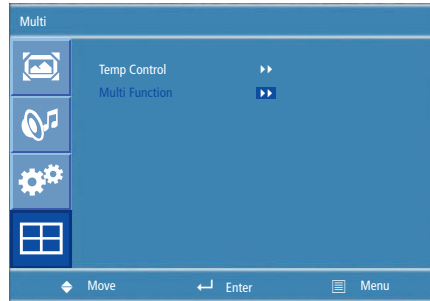

1. Press Menu button. Menu items appear on the screen.
2. Press ▲ / ▼ button to move to "Multi" Icon.
3. Press ↵ button to select "Multi" Icon.
4. Press ▲ / ▼ buttons to move to "Multi Function".
5. Press ▶ or ↵ buttons to select to "Multi Function".
4. Press ▲ / ▼ buttons to set up and change the location of the screen to be displayed. H Set Count/ V Set Count/Display Sequence / H Edge ADJ / V Edge ADJ / SET ID/ Master

(Example of installation) install 3x2 with 6 units

Product 1	Product 2	Product 3
Product 4	Product 5	Product 6

DIGITAL SIGNAGE

Set up Value


installation item	Product 1	Product 2	Product 3	Product 4	Product 5	Product 6
H Set Count	3	3	3	3	3	3
V Set Count	2	2	2	2	2	2
Display Sequence	1	2	3	4	5	6
H Edge ADJ / V Edge ADJ	These are the set up value to make up the un-displayed area of Bezel Part. It can be adjustable according to the contents					
SET ID	1	2	3	4	5	6
Master	You are recommended to use the Master on state only one of products that you are using					

[Cautions]

- In case of connecting the products in series from the input device(HDMI → analog RGB → component → video), a distributor is recommended in order because there may be loss of screen quality.
- You are recommended to use the progressive frequency of HDMI in case of using multi-vision function. (It may not be displayed properly when using Video input or interlace frequency)
- ✓ Master : In case of RS232C Communication, If you control products by "all" protocol, the PC received the return message from master.

DIGITAL SIGNAGE

To connect multiple monitors to the PC in HDMI/DVI mode

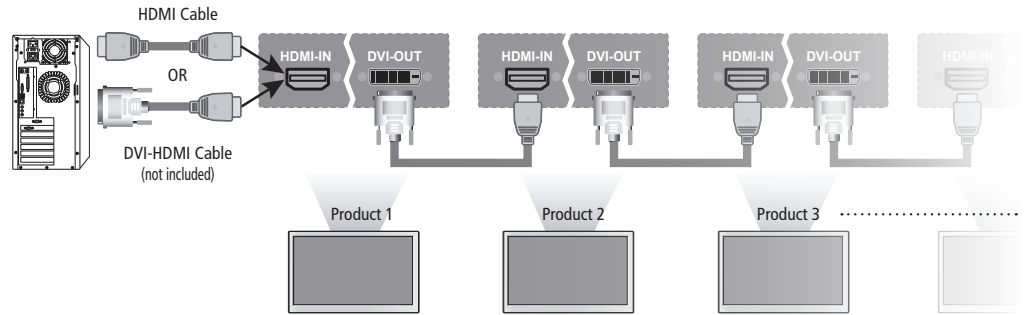


✓ When multi-connecting in/out cascade format, loss of display quality can happen.
a cable distributor.

We recommend using

DIGITAL SIGNAGE

To connect multiple monitors to the
Video in Component mode

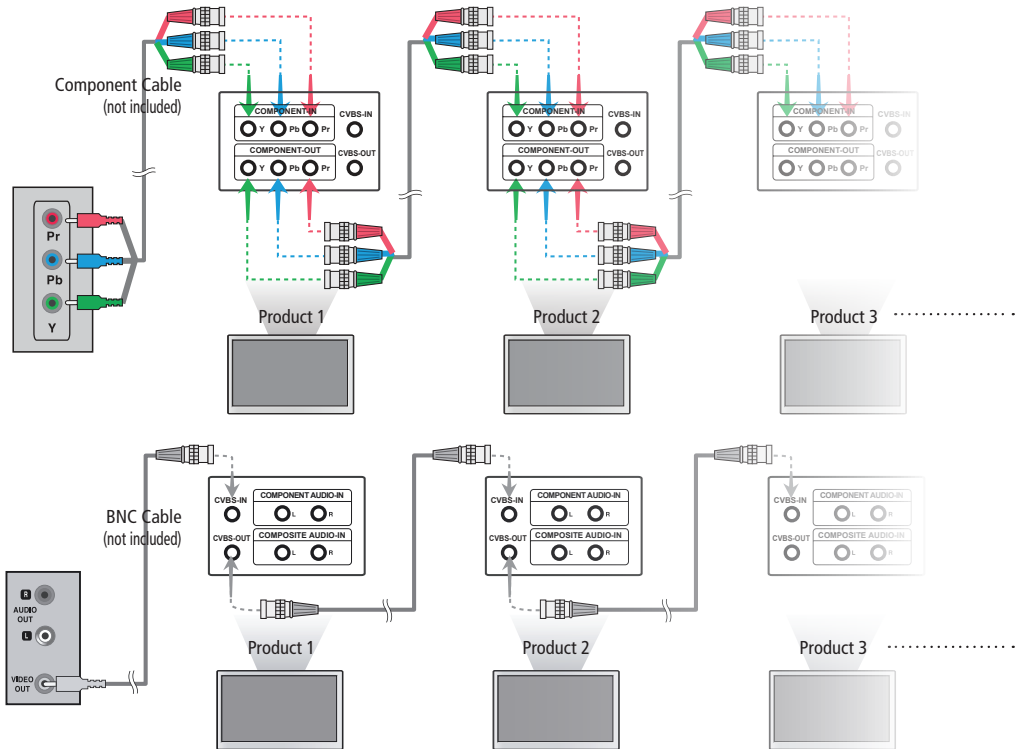



** When multi-connecting in/out cascade format, loss of display quality can happen.
using a cable distributor.*

We recommend

DIGITAL SIGNAGE

How to select Compensation

This function emphasizes the signal level to prevent the signal loss when the displays are chained by HDMI cable.

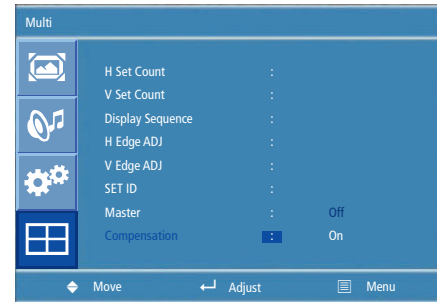
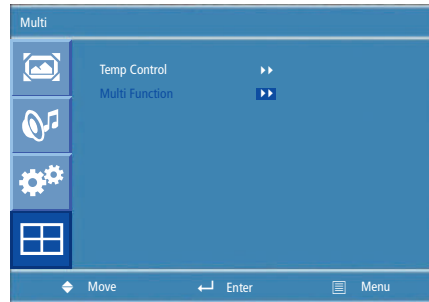


1. Press Menu button. Menu items appear on the screen.
2. Press ▲ / ▼ button to move to "Multi" Icon.
3. Press ↵ button to select "Mutli" Icon.
4. Press ▲ / ▼ buttons to move to "Mutli Function".
5. Press ► or ↵ buttons to select to "Mutli Function".
4. Press ▲ / ▼ buttons to move to "Compensation".
5. Press ► or ↵ buttons to select to "Compensation".
6. Press ▲ / ▼ or ↵ buttons to set to "On/Off".
7. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

✓ In the multi connection, in the product 1 set compensation is on, and the other sets compensation is off in the other product.

DIGITAL SIGNAGE

How to check the currently temperature

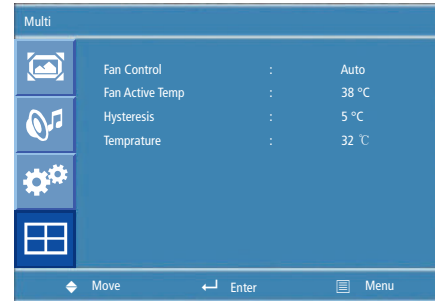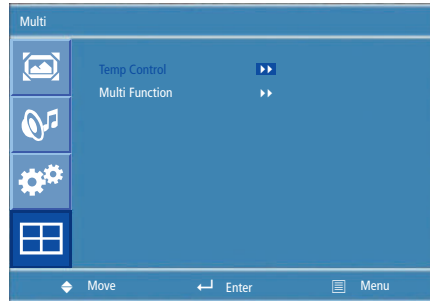

1. Press Menu button. Menu items appear on the screen.
2. Press ▲ / ▼ button to move to "Multi" Icon.
3. Press ↵ button to select "Multi" Icon, then "Temp Control" is highlighted.
4. Press ► or ↵ buttons to select to "Temp Control".
The current temperature is displayed.
5. Press EXIT button to escape OSD MENU or press MENU button to return to the previous menu.

DIGITAL SIGNAGE

Diagnosis

When the product is not working properly, please check before you call customer center.

Symptoms	How to solve the problem
Screen displays late after the power is on.	It happens not to show the screen noise when the power is on. Therefore it is not a defect. But if the screen doesn't show up within 5 minutes from turning on, please contact the customer center.
The screen is too dark or bright?	Adjust the brightness or contrast.
The screen doesn't show up indicating "Out of range".	You are using a signal which is outside the operating frequencies of the product (Unsupported), please change you video signal.
when the screen is scrambled.	please check the cable connection and the signal generator and contact customer center.
Automatic switching-on function is not working / the input data were disappeared when reboot the system after setting up the time	Automatic switching-on function is working when the product has been turned off via remote control or power button on main body. It is because that the set-up values are deleted when the power cord is unplugged.
The screen and sound are not synchronized	Check if the power is on, suspended or is correctly plugged into the outlet. Plug the power cord of other peripheral device to the outlet that the product is being connected.

DIGITAL SIGNAGE

Symptoms	How to solve the problem
The screen displays without the sound.	check the volume up and down with remote control and audio connection cable
No sound from either right speaker or left speaker.	Confirm the status of the sound balance on OSD menu and check the connection of speaker cable.
Remote control doesn't work.	Check if any foreign substances in the sensor and the polarity of battery inserted. If the batteries are drained, replace them with new batteries.
PC D-SUB doesn't work.	Set up the resolution referring to frequency table of input terminal. And re-boot the system as it supports Plug and Play.

- If any problem unsolved by above diagnosis, please call customer center.

DIGITAL SIGNAGE

Specifications

LCD	1920 x 1080 Pixel (Full HD)
Screen size (HxV/mm)	D46*** : 1018.35(H) x 572.54(V) D55*** : 1209.6(H) x 680.4(V)
Recommended resolution	1920 x 1080 @60Hz
Input	IR, RS-232C, HDMI, DVI, D-SUB, PC Audio, Component, Component Audio, CVBS, CVBS Audio, Display Port(option), Display Control(option)
Output	IR, RS232C, DVI, Audio Line-out, Component, CVBS
Power	AC 100- 240V 50/60Hz
Consumption (Typical)	D46*** : 120 W D55*** : 155 W D552** : 170 W
Operating Temperature	0 ~ 40°C
Control type	Remote control, key control

- Above specification may be changed without prior notification for quality improvement.

< REMOTE CONTROL SPEC >


1. REMOTE CONTROL WAVE FORM

1) Remote Control System Infrared rey system

fosc=455KHZ fc=fosc/2=37.917KHZ


2) Signal code

- Transmission
 - One pulse

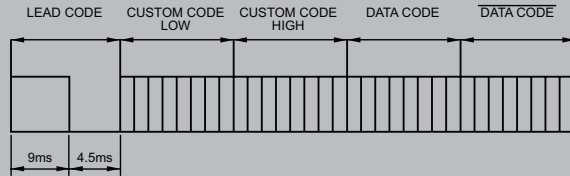


- Bit Description


Bit "0"

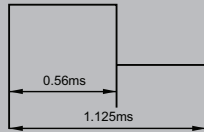

Bit "1"

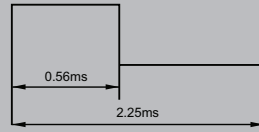

- Flame Interval

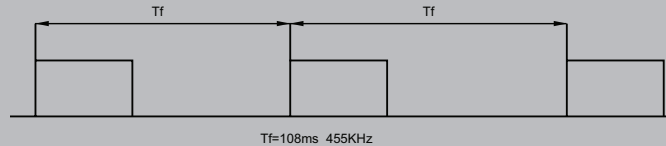


2. REMOTE CONTROL KEY CODE TABLE

Custom Code : 7788H

KEY	DATA
POWER	0x80
MUTE	0x81
MENU	0x95
EXIT	0x96
SOURCE	0xAC
ENTER (+)	0x8C
UP	0x8D
DOWN	0x8E
LEFT	0x8F
RIGHT	0x90


DATA LAYOUT

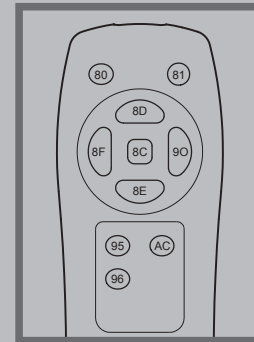

< RS232C COMMAND SPEC >

1. CONFIGURATION

- 1) SPEED : 9600 Baud/s, 8 bit, No parity, 1 Stop bit.
- 2) Cable Connection

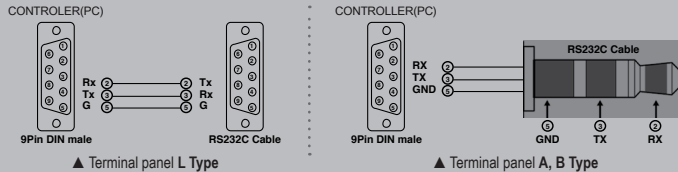

2. COMMAND FORMAT

- SET ID must select from the OSD menu and can't be select through the COMMAND.
- Only one unit can be set as Master unit, select Master ON from the OSD Menu. (DEFAULT OFF)
- For viewing COMMAND from Hyper Terminal windows, One unit must set as MASTER ON

1) Data Format

Item	HEADER	SET ID	COMMAND	END
ascii	did:	xxx- or all-	follow 2.2	.
hexa	0x64 0x69 0x64 0x3A	0x78 0x78 0x78 0x2D or 0x61 0x6C 0x6C 0x2D	follow 2.2	0x2E

HEADER : Command head code.

SET ID : Set ID.

all unit control - "xxx- or all-"

unit no : "01 ~ 99"

COMMAND : follow 2.2

END : inform end of send data.

Example. 1 To power on Set ID No 1

Item	HEADER	SET ID	COMMAND	END
ascii	did:	01-	pn	.
hexa	0x64 0x69 0x64 0x3A	0x30 0x31 0x2D	0x70 0x6E	0x2E
decimal	100 105 100 58	48 49 45	112 110	46

2) Command Type

Item	Command	Description	hexa
Power	pn	power on	0x70 0x6E
	pf	power off	0x70 0x66
	ps	on, video out / on, video in / off, video out / off, video in / on, dpms mode	0x70 0x73

Input - Source	sd	input hdmi	0x73 0x64
	sv	input dvi	0x73 0x76
	sp	input pc	0x73 0x70
	sc	input component	0x73 0x63
	sa	input av	0x73 0x61
	sdp	input Droid PC	0x73 0x64 0x70
	sr	input DisplayPort	0x73 0x72
	is	input source status	0x69 0x73
	pc	picture size : 4:3	0x70 0x63
	pw	picture size : wide	0x70 0x77
Picture	at	pc auto	0x61 0x74
	rt	?x?, h?, v? ex) "1920x1080, h47, v60"	0x72 0x74
Audio	zb	volume up	0x7A 0x62
	zc	volume down	0x7A 0x63
Error	"Error"		
Return 232	rf	Return 232 off	0x72 0x66
	ro	Return 232 on	0x72 0x6F
If you want receive return message in power off or DPMS. To set return 232 "ON".			
Factory Color Control	cr	Enable Color Control Mode	0x63 0x72
	q	quit (from ir & cr mode)	0x71
	sbu	sub-brightness 1 step up	0x73 0x62 0x75
	sbd	sub-brightness 1 step down	0x73 0x62 0x64
	rou	red offset 1 step up	0x72 0x6F 0x75
	rod	red offset 1 step down	0x72 0x6F 0x64
	gou	green offset 1 step up	0x67 0x6F 0x75
	god	green offset 1 step down	0x67 0x6F 0x64
	bou	blue offset 1 step up	0x62 0x6F 0x75
	bod	blue offset 1 step down	0x62 0x6F 0x64
	scu	sub-contrast 1 step up	0x73 0x63 0x75
	scd	sub-contrast 1 step down	0x73 0x63 0x64
	rgu	red gain 1 step up	0x72 0x67 0x75
	rgd	red gain 1 step down	0x72 0x67 0x64
	ggu	green gain 1 step up	0x67 0x67 0x75
	ggd	green gain 1 step down	0x67 0x67 0x64
	bgu	blue gain 1 step up	0x62 0x67 0x75
	bgd	blue gain 1 step down	0x62 0x67 0x64
	blu	backlight value 1 step up	0x62 0x6C 0x75
	bld	backlight value 1 step down	0x62 0x6C 0x64