




Art. no. 702110




Loctite or equivalent.

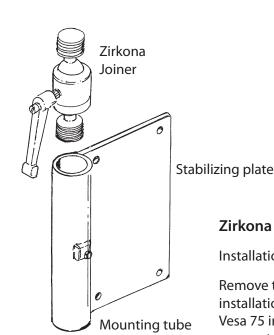

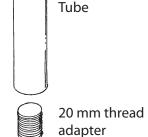

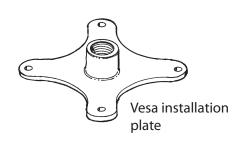

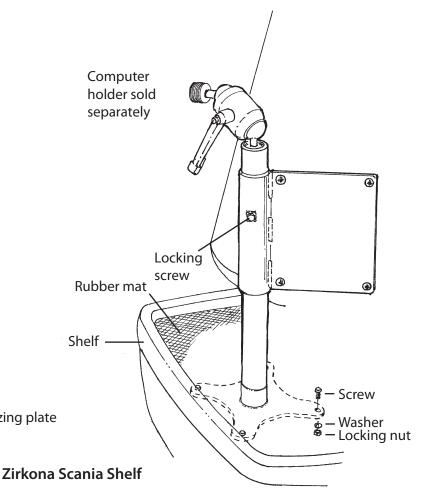

Installation is done on the shelf in front of the central console.

Remove the rubber mat from the shelf and place the Vesa 75 installation plate (when installing in the new Scania cabin the Vesa 75 installation plate should be mounted in the lidded storage compartment, and two of the wings of the plate need to be filed down slightly). Attach the 20 mm thread adapter to the Vesa 75 installation plate and then mount the tube.

Thread the stabilizing plate over the tube so that the plate fits against the instrument panel. (In Scania the stabilizing plate in normally installed behind the coffee maker.) Attach locking screws on the tube to the stabilizing plate once the installation is made. Then drill four 6 mm holes in the console to attach the stabilizing plate using M6 bolts, washers and locknuts.

Now that the Vesa 75 installation plate is fixed in place, drill four holes in the shelf and attach the Vesa 75 installation plate with four bolts, washers and locknuts. (In the new Scania cabin the installation plate should be mounted in the lidded storage compartment, with self-drilling sheet metal screws. Screws not supplied.)

Cut a hole for the mounting tube of the Vesa installation plate in the rubber mat and replace the mat. (In the new Scania cabin the lid can be removed or left in place but if left in place must have a hole cut into it to close.)

Install the Zirkona Joiner. Mount the installation plate onto the Zirkona Joiner and install the computer holder.